

Battery Information continued

Never :

- Mix different types of batteries.
- Mix old and new batteries.
- Dispose of batteries in a fire.
- Attempt to recharge ordinary batteries.

Consumers have a significant role to play in reducing the impact of waste electrical and electronic equipment on the environment, you can help by re-using or recycling such equipment.

The crossed out wheellie-bin symbol indicates that the product & batteries must not be disposed of in domestic waste as they contain substances which can be damaging to the environment and human health. If you cannot re-use or recycle the product or batteries, please use designated collection points, or civic recycling facilities to dispose of them.

Spare parts are available by emailing tkc@wowstuff.co.uk

WARNING:

- NOT SUITABLE FOR CHILDREN UNDER 3 YEARS OLD DUE TO SMALLPARTS WHICH MAY REPRESENT A CHOKING HAZARD.
- PLEASE RETAIN THIS PACKAGING FOR FUTURE REFERENCE.
- ALWAYS TURN OFF WHEN NOT IN USE.



Console instruction manual



For illustration purposes only.

Batteries

To play insert 3 x AAA batteries into the battery compartment (on back of console), ensuring they are inserted according to the polarity shown.

Brightness and Volume

Brightness, and Volume are controlled with the relevant switches on the back of the console. A reset button is also present on the back, to be used if the console is not working as it should be.

How to use

The console is completely touch screen and the Stylus included with the console should be used at all times to move between screens. The console is designed to work intuitively, but there are HELP sections in each game that explain about each individual game if this is required.

The Puzzler Console comes complete with in-built Quick blast puzzles.

Games

Six other games are available to insert into the Console. Each game comes complete with a Game Cartridge. These are inserted into the back of the console, after which their games can be accessed.

Battery Information

PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE.

- Non-rechargeable batteries are not to be recharged;
- Rechargeable batteries are only to be charged under adult supervision;
- Rechargeable batteries are to be removed from the toy before being charged;
- Different types of batteries or new and used batteries are not to be mixed;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited.

Always :

- Make sure battery compartments are secure.
- Use batteries of the correct size and type.
- Fit batteries correctly observing the plus and minus marks on the battery and compartment.
- Replace a whole set of batteries at one time.
- Remove dead batteries from equipment.
- Remove batteries from appliance that will not be used again for a long time.
- Please remember that small button cells and AAA batteries should be kept away from young children as they could be easily swallowed. Seek medical advice if you believe a cell has been swallowed.